


Bluetooth® Connection

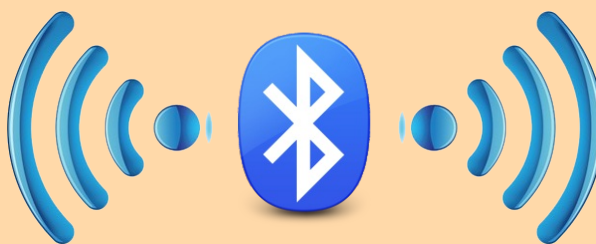



If you want, tablet computers and detector connection via Bluetooth to provide, use GroundExper Bluetooth® software. Do not use USB and OTG cable.

Turn the detector first and then open the software you prefer. In this way connects automatically.

If the software is running when you turn the detector, automatic connection does not occur. Signal button appears as shown in the picture. Tap this button to wait until connection is established.



Tablet computer program icon located on the tablet computer desktop.

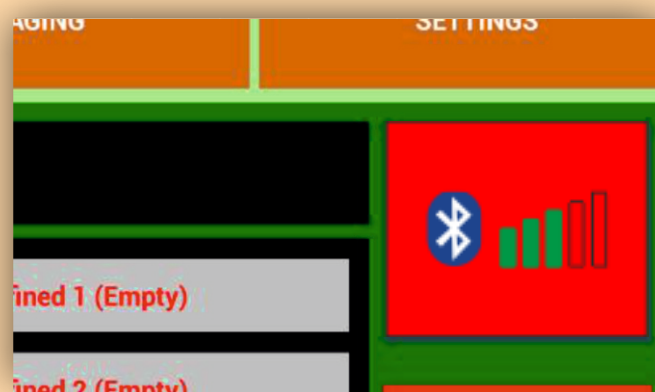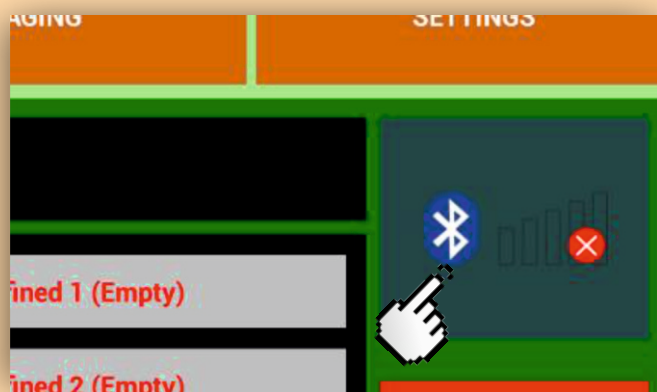


Bluetooth Pairing

When you receive the detector the detector box with tablet computer bluetooth connection paired income. In some cases you need to pair the computer is displayed in the following dialogue window.

In this case the **PIN** section type **1234** and press **OK** button.

Connection is established in a short time. During the matching process only matched detector and leave it open.

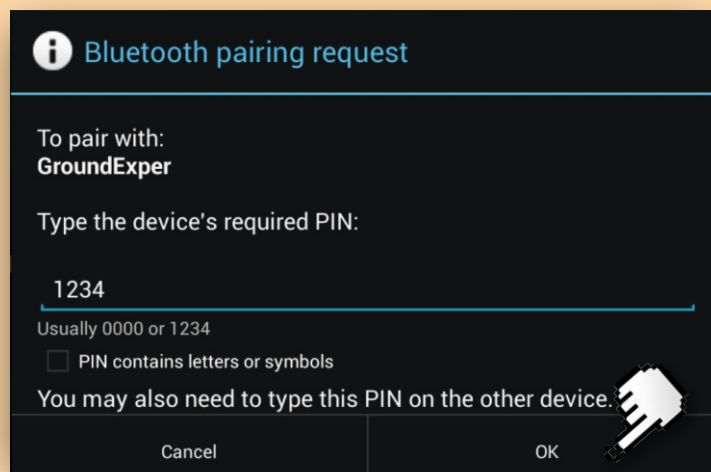



Bluetooth Unpairing

In some cases, you may need to uninstall the detector box with tablet computers between the bluetooth pairing.


To do this, press the Settings button (1) on the computer desktop.

Select Bluetooth (2) from the pop-up window.

Press to the location shown 3.

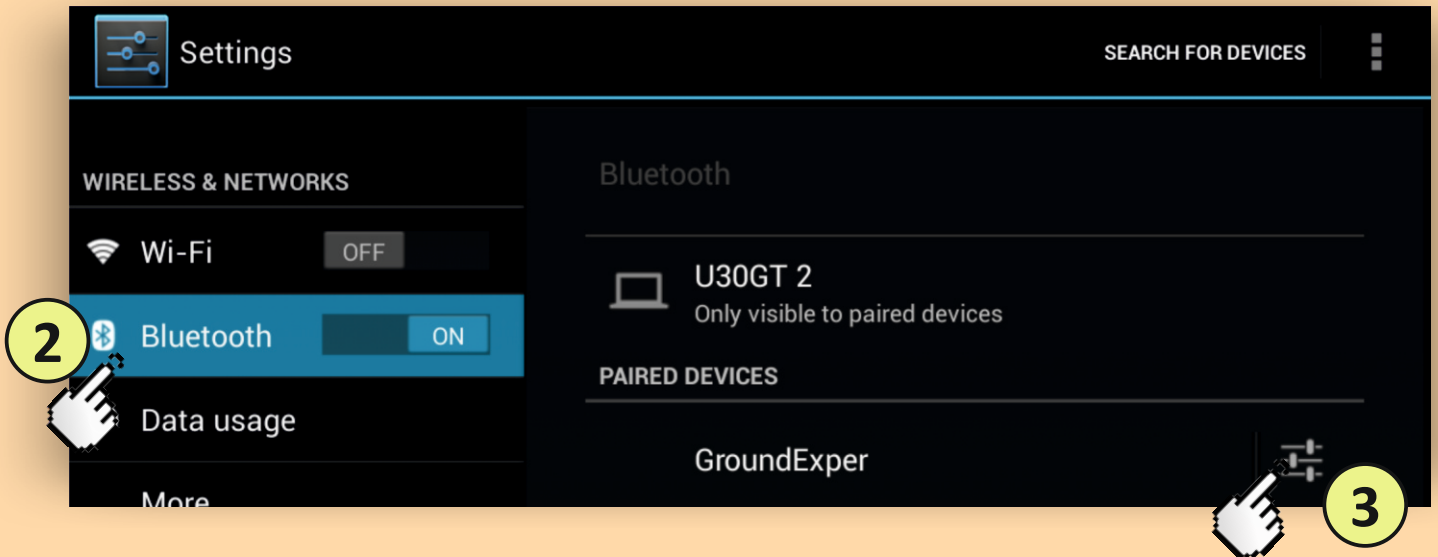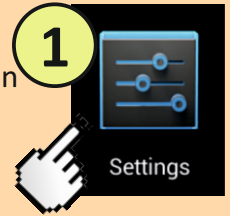

Select **Unpair**

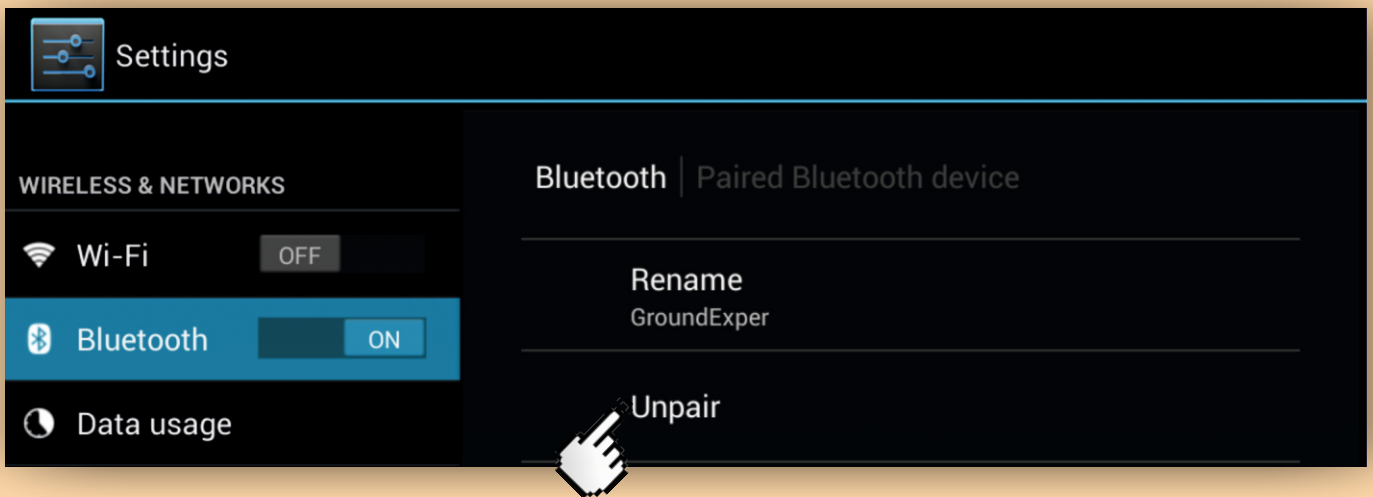

If you want to re-pair it again in order detector and **GroundExper Bluetooth** software to run and made pairing again.